

CAN'T TEAR 'EM
MEASUREMENTS ARE IN CENTIMETRES

STYLE No: 36012

SIZE	CHEST	HIND ARM SEAM LENGTH	CENTRE BACK LENGTH	UNDER ARM SEAM LENGTH
TOLERANCE	± 2.0	± 1.0	± 2.0	± 1.0
XS	118	55	86	41
S	123	56.8	86.6	42.7
M	128	58.4	87.2	44
L	133	60	88.8	45.5
XL	138	61.6	89.4	46.9
2XL	143	63.2	90.0	48.3
3XL	148	64.9	90.6	49.7
4XL	153	66.5	91.2	51.0

POCKET AND FLAP MEASUREMENT FOR SIZE XS.

RADIO POCKET : 11cm WIDE X 20cm DEEP
LOWER POCKET: 22.8cm WIDE X 20cm DEEP
LOWER POCKET FLAP : 23.2cm WIDE X 6.5cm DEEP

POCKET AND FLAP MEASUREMENT FOR SIZES S - 4XL.

RADIO POCKET : 11cm WIDE X 20cm DEEP
LOWER POCKET: 24cm WIDE X 20cm DEEP
LOWER POCKET FLAP : 24.5cm WIDE X 6.5cm DEEP

METHOD OF MEASUREMENT

CHEST: Lay garment flat and measure at underarm from side to side and double the measurement.

HIND ARM SEAM LENGTH: Lay garment flat on Back, measure along hind seam from armhole to bottom of sleeve hem.

UNDER ARM SEAM LENGTH: Measure along underarm seam from armhole to bottom of sleeve hem.

CENTRE BACK LENGTH: Lay garment flat and measure from the centre back neck to hem edge.