

Effective Sterile Eyewash For Industrial Use



Chemicals in the eye can cause serious damage within seconds.

Washing within a few seconds can be decisive in minimising eye damage.

A temporarily blinded person trying to reach an Eyewash a few metres away requires presence of mind, a good sense of direction and an obstacle free passage. In all potentially hazardous environments an Eyewash Solution should be within arms reach.

The Tobin Eyewash has been proven to be a quick and safe way to wash chemicals and irritants from the eyes. This specially designed system gives the fastest possible application combined with a volume large enough to remove most eye contaminants.

Released to the European market in 1982, Tobin has become a popular first response support system for the treatment of eye contaminants. Ideal for external applications, where plumbed eyewash systems would not be practical.

Tobin's bottle is constructed to empty under natural pressure giving a soft flow. When the bottom air vent is opened a patient cannot increase the flow by squeezing the bottle. A one litre bottle provides approximately 3 minutes of continuous flow.

TOBIN WALL STAND with 5 x 1Litre EYEWASH BOTTLES



Order Code TOB124

- Wall-Stand for stationary work places
- 3 Year Shelf life
- Measurements 39 x 45 x 10 cm
- Weight: 7.15kg

TOBIN TRANSPORT STAND with 2 x 1Litre EYEWASH BOTTLES



Order Code TOB127

- For mobile units i.e. trucks, boats, trains etc
- 3 Year Shelf life
- Measurements 34 x 20 x 10 cm
- Weight: 2.9kg

TOBIN 
EYEWASH SYSTEM


AUSTRALIA PTY LIMITED



TOBIN WALL STAND with 2 x 1Litre EYEWASH BOTTLES

Order Code TOB129

- Wall-Stand for stationary work places
- 3 Year Shelf life
- Measurements 39 x 20 x 10 cm
- Weight: 2.9kg



TOBIN POCKET EYEWASH BOTTLE

Order Code TOB121

- Personally carry in pocket
- Enables washing in seconds
- Contains 200ml sterile saline solution
- 3 Year Shelf life



TOBIN REPLACEMENT BOTTLES - 5 x 1Litre SINGLE USE EYEWASH BOTTLES

Order Code TOB128

- Bottle hangs by its cap
- To open simply break off the cap
- Flow can be stopped, to allow blinking & eye movements
- Each bottle shows recommended expiry date




TOBIN REPLACEMENT BOTTLES - 2 x 1Litre SINGLE USE EYEWASH BOTTLES

Order Code TOB126

- Bottle hangs by its cap
- To open simply break off the cap
- Flow can be stopped, to allow blinking & eye movements
- Each bottle shows recommended expiry date



Effective Sterile Eyewash For Industrial Use

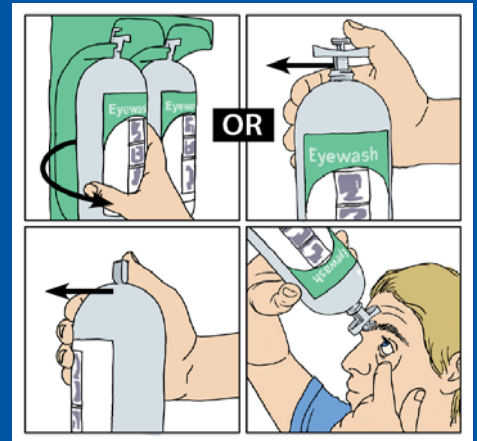

Simple to use

- Break eye wash outlet
- Open air vent at the base of the bottle
- Hold eye lid open
- Hold bottle above eye
- 3 minutes of continual flow per bottle

Bottles are supplementary support and do not remove the need for primary Eyewash Stations as where required by AS4775 and ANSI Z358.1

TOBIN



EYEWASH SYSTEM


AUSTRALIA PTY LIMITED



For more information call 1300 369 273

9-11 Endeavour Road Caringbah NSW 2229
PO Box 2545 Taren Point NSW 2229

Ph: 61-2-9525 9511 Fax: 61-2-9525 9536

visit www.enware.com.au email: info@enware.com.au